
CARE & MAINTENANCE

Collection:
Pattern:
Reference:
Composition:
Description:

Artisan Twill 40330 • Chroma Natural wallcovering on non-woven backing The basic material for this wallcovering is a tropical plant, the pandan. The fibres of this plant are interwoven by hand. This braiding is cut diagonally into strips, which are then woven. We drew the inspiration for this wallcovering from the growing trend of braiding in fashion and interior design.

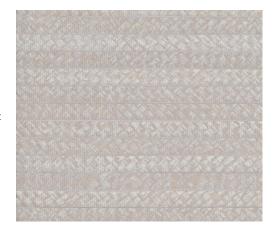

During installation:



Carefully dab off any adhesive stains immediately (before the adhesive has dried) with clean water and a soft cloth. Do this after installation of each length.

Maintenance:

First try to apply in an inconspicuous place. Try to remove any stains immediately, before the stain can dry out, by dabbing off the surface with a moist, lint-free, clean white cloth. Only use clear water, no soap.

Avoid excessive rubbing of the surface. Avoid excessive soaking of the surface.

Dust can be wiped off with a damp, lint-free, clean cloth or a brush with soft bristles, or can be lightly vacuumed with a soft bristle attachment to avoid damaging the surface.

Arte can not be held responsible if damage is caused to the product during the cleaning process.



More info? <u>Click here</u>



-ARTE®

wallcoverings for the ultimate in refinement