CARE & MAINTENANCE


Collection: Monochrome
Pattern: Window
Reference: 54000

Composition: Wallpaper on non-woven backing

Description: A tile pattern: from a distance, it looks as if you

have hundreds of small tiles on your wall. The turquoise design will make you think you are in an oriental palace. Moreover, the geometric motifs suggest the Art Déco style: decorative and

somewhat eclectic.

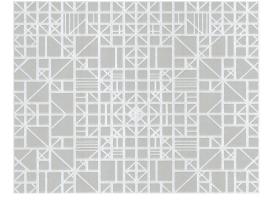

During installation:



Carefully dab off any adhesive stains immediately (before the adhesive has dried) with clean water and a soft cloth. Do this after installation of each length.

Maintenance:

First try to apply in an inconspicuous place. Try to remove any stains immediately, before the stain can dry out, by dabbing off the surface with a moist, lint-free, clean white cloth. Only use clear water, no soap.

Avoid excessive rubbing of the surface. Avoid excessive soaking of the surface.

Dust can be wiped off with a damp, lint-free, clean cloth or a brush with soft bristles, or can be lightly vacuumed with a soft bristle attachment to avoid damaging the surface.

Arte can not be held responsible if damage is caused to the product during the cleaning process.





