
## CARE & MAINTENANCE

Collection:
Pattern:
Reference:
Composition:
Description:

Cameo Shibam 66013 • Pale White Wallpaper on non-woven backing This intriguing pattern has a subtle threedimensional effect through the rendering of open woven sisal patchwork in different directions. The sisal threads are uneven and have a rough character, allowing the imperfections come into their own.

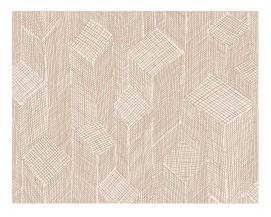

## During installation:



Carefully wipe off any adhesive stains immediately (before the adhesive has dried) with clean water and a soft sponge. Do this after installation of each length.

## Maintenance:

First try to apply in an inconspicuous place. Try to remove any stains immediately, before the stain can dry out, by whiping off the surface with clean water and a soft sponge. Only use clear water, no soap.

Dry with a lint-free, clean cloth.

Avoid excessive rubbing of the surface. Avoid excessive soaking of the surface.

Dust can be wiped off with a damp, lint-free, clean cloth or a brush with soft bristles, or can be lightly vacuumed with a soft bristle attachment to avoid damaging the surface.

Arte can not be held responsible if damage is caused to the product during the cleaning process.



More info? <u>Click here</u>



-ARTE<sup>®</sup>

wallcoverings for the ultimate in refinement